


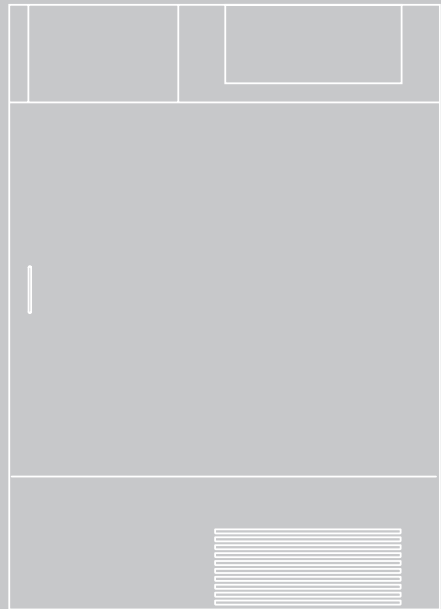

100 Jahre

Operating instructions
Heat pump dryer

Suisse 8 WPT 16



Symbols



Please read the instructions.



Warnings are marked with a warning triangle! The text gives information how a dangerous situation can be avoided!

Signal words indicate the severity of the danger, if not avoided.



Warning

means that possible personal injuries, and potentially life-threatening injuries may occur



Important

means property damages may occur.



Dear Customer

We are pleased that you have chosen a HUWA dryer.

Your new dryer is the result of many years of development work.

The highest quality requirements, both in development and manufacture, guarantee along lifetime.

Its design meets all the demands of modern laundry care and offers you a varied and individual choice of programmes.

Sparing use of energy and short drying times help to ensure that you can use your dryer as economically as possible.

Please read these instructions carefully to enable you to use all the possibilities and advantages of your new dryer.

Please note in particular the safety informations and the enclosed guarantee and customer services booklet.

We hope you will be very happy with your new HUWA dryer.

Your
HUWA Waschmaschinenfabrik
R. Hunziker AG

Contents

Safety and safety measures	6
Disposal	9
Tips for drying	10
Environmentally compatible drying	11
Observe before first use	11
Machine description	12
Drying	14
Preparing the appliance	14
Selecting programme and starting	14
Changing the programme	15
Interrupting the programme	16
Cancelling the programme	16
Adding more laundry	17
Programme end	17
Cleaning the fluff filters	18
Programme survey	20
Most efficient programme for cotton textiles	20
Cotton and line	20
Easy care laundry	22
Time drying warm / cold	22
Mixed laundry	22
Additional programmes	24
Drying in the basket	24
Special programmes	26
Drying in the basket	26
Mixed laundry	27
Additional programmes	27
Programme options	28
Gentle	28
Time preset	28
Drying +	29
Time	29
Express	29
Settings	30
Menu Settings	31

Cleaning and Maintenance	34
Cleaning the machine	34
Cleaning the filter support	34
Cleaning the moisture sensor	35
Emptying for frost protection or transport	35
Self-cleaning	35
Problems	36
Technical specifications	39
Customer service	40
Warranty	40

Safety and safety measures



The enclosed documents contain important information on the installation, use and safety of the dryer. Keep the documents safe for other users or subsequent owners.

- ▶ Read the instructions carefully before operating the machine.
- ▶ Keep the instructions near the machine for further reference.

This machine meets the stringent safety regulations for electronic devices.

- ▶ Please observe the safety instructions in the operating and installation instructions.

Use in accordance with the intended purpose

The dryer is suitable exclusively for the drying of household textiles. The machine may be operated by children 8 years or older and adults with impaired physical, sensory or mental capabilities or lack of experience and knowledge, if they are supervised or have been instructed regarding the safe use of the machine and understand the dangers resulting from the use of the machine. Do not let children play with the machine.

Do not let children carry out cleaning and user maintenance without supervision.

Safety while handling and operating

Warning

Danger of electric shock!

- ▶ Do not connect an appliance which displays visible damage.
- ▶ Only touch the main switch with dry hands.
- ▶ Only pull the plug, do not pull the cable.
- ▶ Under no circumstances spray the machine with water or clean it with a steam cleaner.

Repair work may only be executed by qualified and trained personnel and defective components may only be replaced with original spare parts by the original equipment manufacturer. Inexpert repairs or non-original parts can cause considerable property damage and risk to the user. Modifications to the appliance are only admissible after consultation with the manufacturer.

- ▶ If the mains supply is damaged, replace it with the corresponding replacement line (available from manufacturer or customer service).

- ▶ Always unplug the machine from the power source before carrying out maintenance work.
- ▶ If the machine is not needed for a longer period of time, disconnect it from the power supply.

Warning

Risk of injury!

Climbing onto the dryer may cause it to tip and cause injuries.

- ▶ Never climb onto the appliance.
- ▶ Do not sit, lean or support yourself on the loading door.

Reaching into the turning drum may cause injury to hands.

- ▶ Do not reach into the rotating drum.
- ▶ Wait until the drum stops turning.

Components sticking out from the machine (e.g. loading door) may break off and cause injuries, when used for lifting.

- ▶ Do not lift the machine on protruding components.

When a drying cycle is stopped early, the heat and moisture of the laundry can cause burns when comes in contact with the skin.

- ▶ Appropriate hand protection is therefore to be worn.
- ▶ Remove the laundry quickly and spread it out so that the heat can be given off.

If a puddle forms on the floor near the appliance (hose tear, leak, etc.), wipe it dry and eliminate the cause (see **Problems**).

Warning

Risk of fire!

Items containing heat sensitive substances can ignite during the drying process.

- ▶ Never dry laundry in your dryer that has been cleaned with industrial chemicals or treated with flammable solvents, such as stain removers, benzine etc.
- ▶ Wash laundry items soiled with cooking oil, acetone, alcohol, gas, petroleum, kerosene, stain remover, turpentine, wax or wax remover, in warm water with extra laundry detergent.
- ▶ Do not dry textiles in the dryer which have been in contact / covered with setting lotion, nail polish remover or similar agents.
- ▶ Do not dry items made of foam rubber (latex foam rubber), shower caps, waterproof textiles, rubberised articles, as well as garments or pillows filled with foam rubber flakes in the dryer.
- ▶ Remove all objects, such as e.g. lighters and matches.
- ▶ Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Safety for children

Warning

Risk of injury!

Children are in danger of injury or life-threatening situations, when playing with the machine.

- ▶ Keep children under 3 years of age away from the machine, when not closely supervised.
- ▶ Never permit children to play in, on or near the washing machine.
- ▶ Activate the child lock, if necessary.

Children may lock themselves in the machine – this is a life-threatening situation.

Ensure that an old appliance can no longer be used:

- ▶ Disconnect the mains cable.
- ▶ Cut through the mains cable and remove cable and plug.
- ▶ Destroy or remove the door lock.

When playing with packaging material / film and packaging parts, children may become entrapped in it or pull these over their head and suffocate.

- ▶ Keep packaging material away from children.

Safety during installation

Warning

Risk of injury!

If the machine is to be placed on a plinth, it must be mounted according to the installation instructions, otherwise this involves danger of tipping or falling.

- ▶ Have the machine installed according to the mounting instructions by qualified and trained personnel.
- ▶ Do not connect an appliance which displays visible damage.
- ▶ When installing as a washer-dryer tower combination, use a stacking kit to secure the dryer.

Observe when drying

The fluff filters must be inserted when operating this machine.

- ▶ Never operate the machine with damaged fluff filters.
- ▶ Keep the area surrounding the dryer free of dust and fluff.
- ▶ The fluff filters must be cleaned regularly. Fluff may compromise and destroy the heat exchangers.

The maximum load is 8 kg of dry textiles.

- ▶ Dry clean laundry in the dryer only.
- ▶ Before starting a programme, make sure that there is no foreign object in the drum.
- ▶ Keep pets away from the machine.

A drying procedure should always end with fully completed cooling-off, so that the laundry items remains at a temperature that does not damage them.

- ▶ If a drying cycle is ended prematurely without cooling-off, all of the laundry must be removed quickly and spread out so that the heat can be given off.
Caution: when a drying cycle is stopped early, the heat and moisture of the laundry can cause burns when it comes into contact with the skin. Make sure to wear appropriate hand protection.

Disposal

Packaging from your new machine

All packaging materials used are environmentally friendly and reusable. All card is made of 80 – 100 % recycled paper. Wood is not chemically treated. Films are made of polyethylene (PE), banding is made of polypropylene (PP) and the corner protection is made of polystyrene (PS). These materials are pure hydrocarbon compounds and are recyclable.

Return the packaging to the retailer or supplier.

Dispose of all packaging materials properly. Processing and reuse saves raw materials and reduces waste volumes.

Disposal of your old machine

Please do not keep your old machine and under no circumstances dispose of it in your normal waste. The old machine contains valuable materials which should be sent for recycling.

Components from your old machine must not be reused. Please ensure that your old machine is disposed of properly. In this way you can help to ensure environmentally friendly disposal and/or recycling methods.

Additional information on the recycling of this product can be obtained from your commune, your waste disposal

Tips for drying

Sorting the laundry

Follow the care symbols in the fabrics. To achieve even drying results, sort the laundry by fabric type and desired level of dryness.



Dry at normal temperature



Dry at low temperature



Do not tumble dry

Dry wool or textiles containing wool with the special programme **Wool Finish** only (risk of felting).

Notice

Textiles with metal reinforcements can damage the components of the machine and must not be dried in the dryer.

Preparing the laundry

- ▶ Do up all zips, hooks and eyes.
- ▶ Button up duvet covers and pillowcases.
Tie together loose belts, apron strings etc.

Drying the laundry

- ▶ Remove easy care laundry from the dryer in a slightly damp state if possible (**Slightly dry**) and allow to finish drying in the air. Over drying causes creases.
- ▶ Laundry which is still too damp after drying a load of widely varying fabrics can be dried further using the programme **Time drying**.
- ▶ Knitted fabrics, e.g. jersey underwear, can shrink slightly during drying. Do not use the **Extra Dry** programmes for these fabrics.
- ▶ Dry sensitive fabrics such as silk and synthetic curtains with the special programme **Synthetics** only (risk of creasing).
- ▶ For drying single pieces of laundry select the programme option **Express** or a **Timed drying** programme.

Environmentally compatible drying

Notice

Wringing wet laundry: waste of energy!

- ▶ Remove as much water as possible from the laundry before drying by spinning in a washing machine or spin dryer. The higher the spin speed, the shorter the drying time and lower the energy consumption.
- ▶ You should also spin easy care laundry.

Notice

Overfilling affects the drying result and severely creases the laundry.

- ▶ Do not exceed the maximum load.
-

Small loads are uneconomical and result in increased wear of laundry and machine.


- ▶ If possible, always load the dryer with the maximum load.

Observe before first use

- ▶ Install the machine according to the installation instructions.
- ▶ Wipe the inside of the drum with a damp cloth.

Machine description



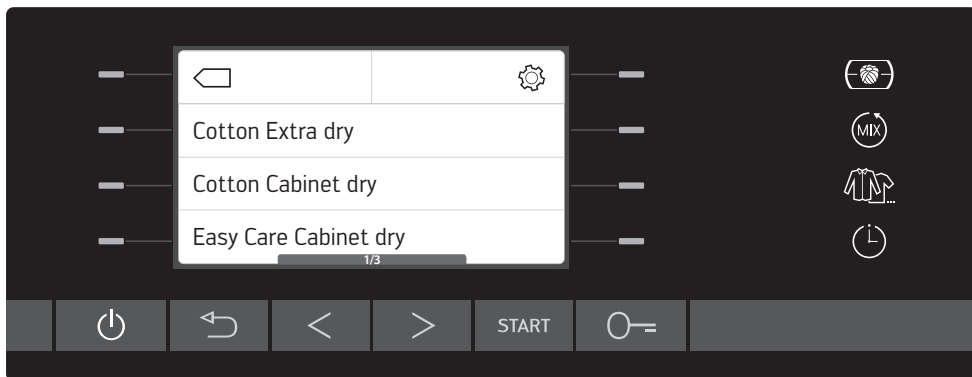

On / Off



Drying in the basket



Back in the menu



Mixed laundry



Scroll backwards



Additional programmes



Scroll forwards



Time preset

START

Start programme



Open the door



Standard programme



Settings

1/3


Page number programme menu


Drying


Preparing the appliance

- ▶ Check whether the fluff filters are in place (see **Drying / Clean fluff filters**).
- ▶ Switch on the power supply.


Turn on machine

- ▶ Press button **On / Off** . After starting, the main menu is displayed.

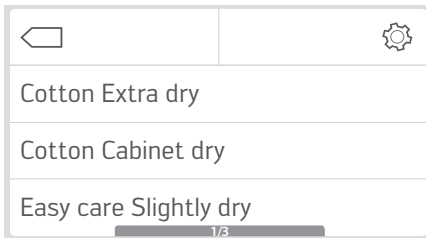

- ▶ Additional menu pages can be opened by pressing the arrow button **Scroll forwards** .

Opening the door


- ▶ Press button **Open the door** . The loading door springs open.

Child lock active

See  **Settings / Child lock**.

- ▶ The door can be opened manually at any time by pressing against the door near the locking latch.


Selecting programme and starting

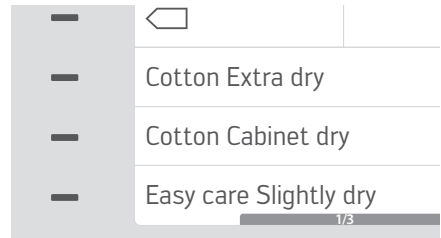

- ▶ Select the desired programme by tapping the light bar. The display shows the programme selected with programme duration, maximum load as well as additional selectable options.
- ▶ Select the desired programme options or put the laundry in the machine.

Select programme options

The individual options are described in the chapter **Programme options**.

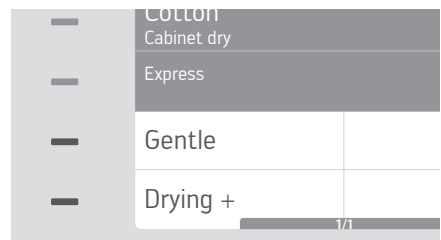

- ▶ Select the desired option/s by pressing the light bar or the corresponding symbol.

- ▶ Selected options change colour and are shown in the upper part of the display.
- ▶ If necessary, cancel the selection by tapping the light bar again.

Adding laundry

- ▶ Make sure that there is no foreign body in the drum and the detergent drawer (coins, nails, paper clips, etc.).
- ▶ Distribute the laundry evenly in the drum.
- ▶ Mix large and small laundry items.

Closing the door

- ▶ Close the door by pushing it until the lock audibly engages.
- ▶ Ensure that no items of laundry are trapped between the door and the rubber seal.



Starting the programme


- ▶ Press button **START**.

Child lock active

See  **Settings / Child lock.**

Changing the programme


Changing the programme before programme start

- ▶ Return to the main menu with the button  **Back in the menu.**
- ▶ Repeat the selection of programmes and options.

Child lock active

See  **Settings / Child lock.**


Changing the programme after programme start

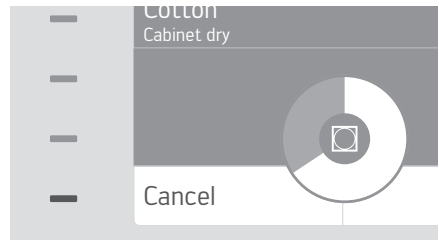


- ▶ Press the light bar next to **Cancel** until **End** is displayed.


Child lock active

See  **Settings / Child lock.**

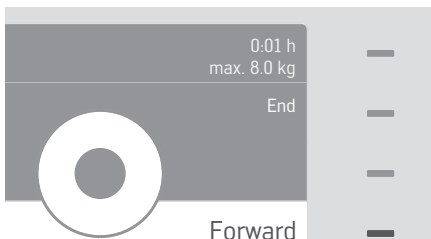

- ▶ Return to the main menu with the button  **Back in the menu**.
- ▶ Repeat the selection of programmes and options.
- ▶ Press button **START**.


Skipping to the next programme step

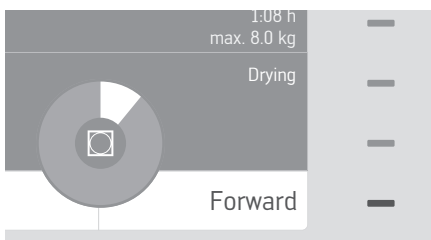


- ▶ Press the light bar next to **Forward** until the desired programme step is displayed.


Child lock active

See  **Settings / Child lock**.

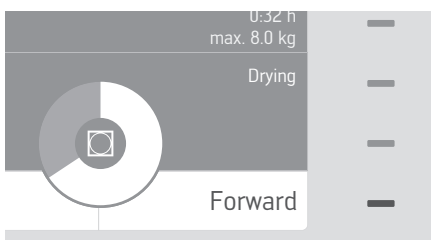

Interrupting the programme

- ▶ Press button **On / Off**  until the following window is displayed:

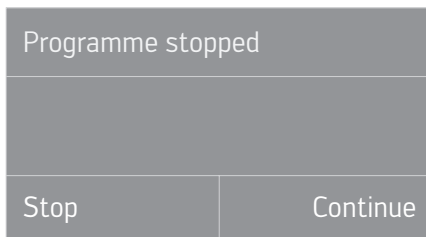


- ▶ Press the light bar next to **Stop**, to end the programme. To resume the programme, press the light bar next to **Continue**.

Child lock active

See  **Settings / Child lock**.

Cancelling the programme

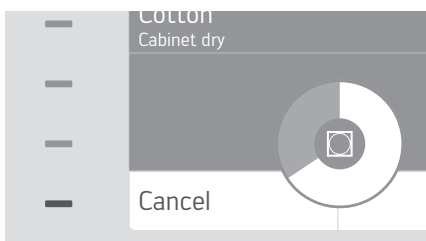

- ▶ Press the light bar next to **Cancel** until **End** is displayed.


Child lock active

See  **Settings / Child lock**.




The programme will end.

Adding more laundry


- ▶ Press button **Open the door**  (is not lit!).

Child lock active

See  **Settings / Child lock.**

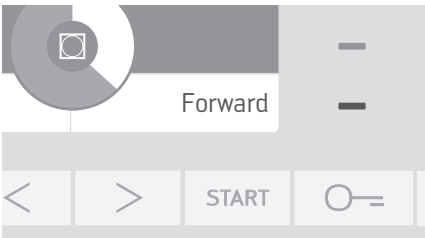


The programme is stopped.

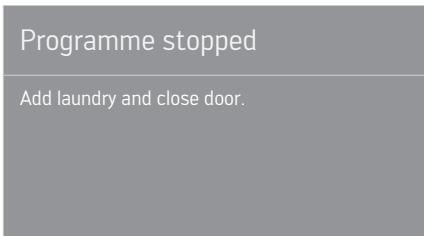

- ▶ Follow the directions on the display.

Programme end


The programme end is shown.

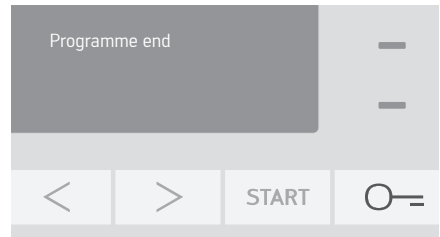


When crease protection is turned on, the drum continues to turn in short intervals after programme end (see **Settings / Anti-crease**).

The door can be opened.

Remove the laundry

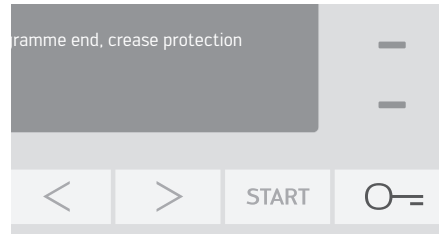

- ▶ Press button **Open the door** .
- ▶ Remove the laundry.
- ▶ Clean the fluff filters.


Cleaning the fluff filters

When fabrics are used, the fibres are rubbed (laundry fluff), which are released when the fabrics are dried, collecting in the fluff filters in the door opening. Clogged fluff filters may affect the drying process.




- ▶ Clean filter **A** and **B** regularly.

Clean the fluff filter **A** after every drying programme

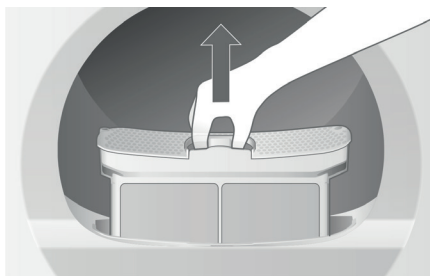

- ▶ Pull out the inner, fine filter **A** and swing it open.

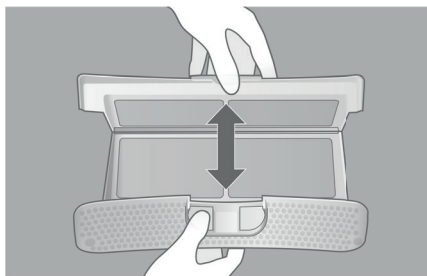


- ▶ Rub your hand over the inside of the filter to remove the fluff.
- ▶ Replace the fluff filter and make sure it is in the correct position.

Notice


It may happen that a supposedly proper cleaned filter becomes impermeable, due to a fine, invisible coat remaining in the filter meshes.

- ▶ Pour a little water on to the inside of the filter. If it is impermeable, clean the filter with a brush under running water.


Cleaning the filter **B** daily

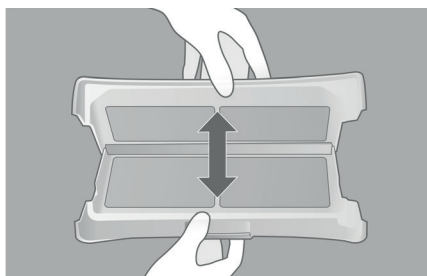

- ▶ Pull out the outer coarse filter **B** and swing it open.

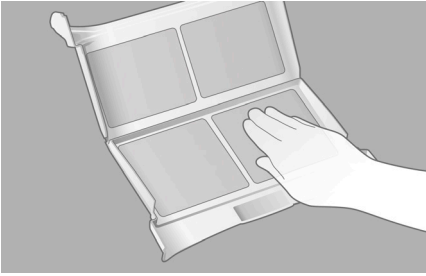

Switching off the machine

- ▶ Press button **On / Off**  until the display turns off.
- ▶ Unplug the machine, when not used for longer periods of time.

- ▶ Rub your hand over the inside of the filter to remove the fluff.
- ▶ Replace the fluff filter and make sure it is in the correct position.

Descaling the fluff filters

If the coat cannot be brushed away, a commercial descaler spray must be used to dissolve it.

- ▶ Spray the descaler on the entire filter surface and leave it to take effect. In case of stubborn coats place one layer of kitchen roll onto the filter surface and spray descaler on it to ensure the filter is moist. Leave the descaler to take effect overnight. Then clean the filter under running water with a fine brush.

Notice



- ▶ Never operate the machine with damaged fluff filters. Fluff filters are consumables and replacements can be ordered from our customer service department.
-

Programme survey

Care symbol	max. washing load	Wash Type / Programmes drying target	Fabric
-------------	-------------------	--------------------------------------	--------


Most efficient programme for cotton textiles

The following standard programme (marked with ) is suitable for drying normally wet cotton

	8,0 kg	Cotton Cabinet dry 	Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks
--	--------	--	---

Programme settings for testing and energy labelling according to directive 2010/30/EU

Cotton and line

	8,0 kg	Cotton Mangle moist	Bed and table linen
	8,0 kg	Cotton Iron damp	Bed and table linen, towels, T-shirts, polo shirts, work wear
	8,0 kg	Cotton Slightly dry	T-shirts, polo shirts, dresses, trousers, work wear, underwear
	8,0 kg	Cotton Cabinet dry	Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks
	8,0 kg	Cotton Extra dry	Towelling bathrobs and bed linen (no underwear or socks)



 Always check the care symbols on the fabrics

Comments	Spun in washing machine at rpm	Approx. duration min.	Approx. power cons. kWh
according to regulation (EU) no. 932 / 2012			
n textiles and is most efficient regarding the combined energy consumption.			
▶ For laundry which will not be ironed	1000	139	1,92
▶ For laundry that is to be ironed with a finisher	1200 1400 1600	81 72 63	1,0 0,8 0,7
▶ For laundry to be ironed	1200 1400 1600	91 82 70	1,2 1,0 0,9
▶ For laundry which will not be ironed or only lightly ironed	1200 1400 1600	107 95 87	1,5 1,2 1,1
▶ For laundry which will not be ironed	1200 1400 1600	119 107 97	1,7 1,4 1,2
▶ For particularly thick or multilayered fabrics	1200 1400 1600	131 118 106	2,1 1,8 1,6



Care symbol	max. washing load	Wash Type / Programmes	drying target	Fabric
-------------	-------------------	------------------------	---------------	--------

Easy care laundry

Non-iron synthetic and mixed fibres and cotton with non-iron trim, e.g. viscose, cupro, modal, polyester

	4,0 kg	Easy care Iron damp	Anoraks, covers
	4,0 kg	Easy care Slightly dry	Shirts, blouses, sportswear, bed and table linen, sweat suits
	4,0 kg	Easy care Cabinet dry	Trousers, dresses, skirts, shirts, blouses, corsetry, leggings, sportswear with large proportion of synthetic fibres
	4,0 kg	Easy care Extra dry	Trousers, dresses, skirts, shirts

Time drying warm / cold

	8,0 kg	Time drying	For extra drying time for multi-layer textiles (e.g. sleeping bags) or for drying single laundry items, such as for example terry towelling
	1,6 kg	Reconditioning	The laundry is aired without adding additional temperature



Mixed laundry

	4,0 kg	Mixed laundry Cabinet dry	For mixed laundry made of cotton and easy care textiles (e.g. sportswear and terry towelling)
--	--------	----------------------------------	---

Comments	Spun in washing machine at rpm	Approx. duration min.	Approx. power cons. kWh
▶ For laundry to be ironed	600 800	38 32	0,5 0,4
▶ For laundry which will not be ironed or only lightly ironed	600 800	52 45	0,6 0,5
▶ For laundry which will not be ironed	600 800	60 53	0,7 0,6
▶ For particularly thick or multilayered fabrics	600 800	66 57	0,8 0,7
▶ Time drying warm 10 min – 2 h 30 min	–	–	–
▶ Time drying cold 10 min – 1 h 30 min	–	–	–
▶ For laundry which will not be ironed or only lightly ironed	800	70	0,8

Care symbol	max. washing load	Wash Type / Programmes drying target	Fabric
-------------	-------------------	---	--------



Additional programmes

	3,0 kg	Shirts, blouses Iron damp	Shirts and blouses (max. eight pieces of clothing)
	4,0 kg	Jeans Cabinet dry	Jeans
	3,2 kg	Synthetics Cabinet dry	Silk, delicates, lingerie, curtains and the likes
	2,6 kg	Wool finish Fleece dry	Machine washable fabrics made of or containing wool Wool mark stating «non-felting» or «machine washable»
	3,0 kg	Sportswear, outdoor Cabinet dry	Sports and leisure jackets, weather gear, ski wear
	2,4 kg	Down, pillows Time drying	Down textiles (e.g. jackets, coats, pillows and light blankets)



Drying in the basket

	4,0 kg	Drying in basket Time drying	Pullovers, socks und accessories made of wool. Sports shoes, caps, bicycle helmets, cuddly animals, toys, etc.
--	--------	---	---

Comments	Spun in washing machine at rpm	Approx. duration min.	Approx. power cons. kWh
▶ The programme reduces creasing, is gentle to the laundry and facilitates ironing	600 800	51 44	0,6 0,5
▶ Jeans are dried completely	600 800	96 83	1,3 1,1
	600 800	64 55	0,7 0,6
▶ Remove the laundry immediately after the programme has ended and place it on a flat terry towel for drying ▶ The laundry becomes more fluffy, but is not dried	800	5	0,1
	800	67	0,8
▶ Time drying warm 50 min – 2 h 30 min	–	–	–
▶ Time drying warm 10 min – 2 h 30 min Use: See Special programmes / Drying in the basket	–	–	–

Special programmes


Pressing the symbol button the menu of the respective programme group is called up.

Drying in the basket



Damp wool must be moved as little as possible as it tends to felt. Sports shoes may damage the drum due to their weight.

Using the basket allows for gentle drying without tumbling the individual machine-washable wool textiles, sports shoes made of synthetics / leather, caps, cycle helmets, fluffy animals, toys, etc.

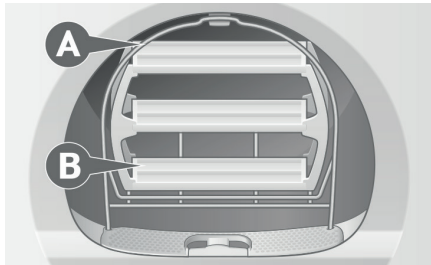


A Basket

for drying shoes and accessories

B Insert

for holding laundry items

Insert the basket

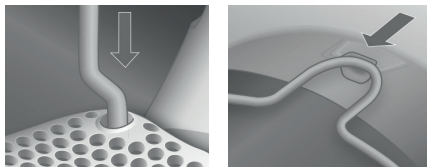


- ▶ Insert the feet of the basket into the holders.
- ▶ Lean the handle against the top.

Notice

- ▶ The drum has to be empty!
 - ▶ Check the basket before inserting.
Never use a damaged basket.
-

Adding laundry





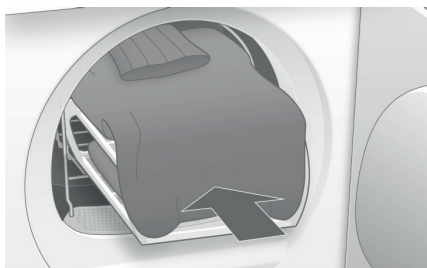


- ▶ The laundry has to be spin-dried! (time and energy saving)
- ▶ Insert pieces of laundry fluffily, do not squeeze.
- ▶ The laundry must not make contact with the drum! Otherwise, pieces of laundry could be jammed and damaged.


Trousers / Skirts



Pullovers

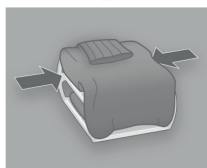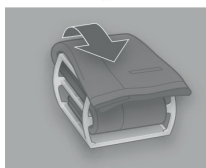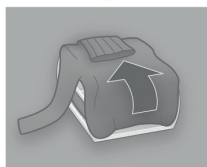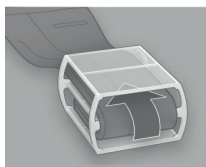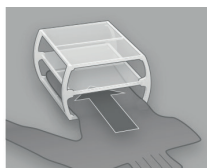

Sports shoes and accessories

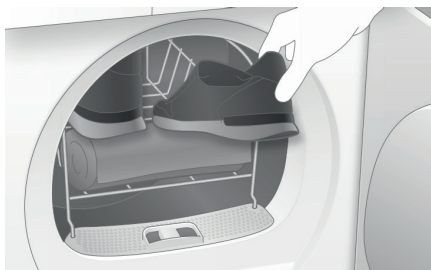

- ▶ The insert **B** is not used for sports shoes and accessories (caps, cycle helmets, fluffy toys, toys, etc.).
- ▶ Extensively pull out tongue of sports shoes.
- ▶ Remove shoelaces, inserted soles and / or heel cushions.

- ▶ Put rolled towel into the basket making an inclined surface. Put in the shoes with heels on towel.

Notice

- ▶ Use the basket only for the special programme **Drying in the basket (Programme survey / Drying in the basket)**.
-

PMixed laundry




This programme is optimised for drying mixed laundry made of cotton and synthetic.

Additional programmes



Use these programmes for best results when drying a variety of textiles, such as e.g. shirts, blouses, jeans, wool etc.

Programme options

- ▶ By also selecting one or more options, a wash programme can be specifically tailored to the particular characteristics of the laundry.
- ▶ Programme options are only activated for the duration of the current wash programme.
- ▶ Long-term modifications can be made in the user settings (Menu  **Settings**) and stay activated until they are changed again.

Gentle

For gentle drying of particularly sensitive textiles. The temperature is reduced.

Time preset




- ▶ With the option **Time preset** the start time of the programme can be delayed and thus suit your lifestyle (e.g. taking advantage of cheaper night-time electricity).


Notice

Check, if the time on the machine is set correctly. (see **Settings / Time**).

- ▶ First select the desired programme.
- ▶ After this select the option **Time preset**.

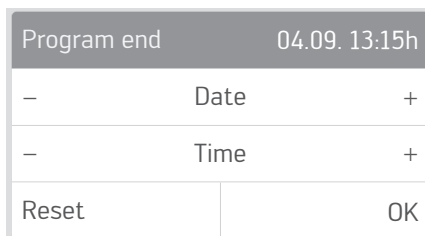

- ▶ Enter date and time for the programme end by tapping the light bar (15 min-steps).
- ▶ Confirm the entry with **OK** and press **START**.
The preset time starts. The remaining time until programmes start is displayed.

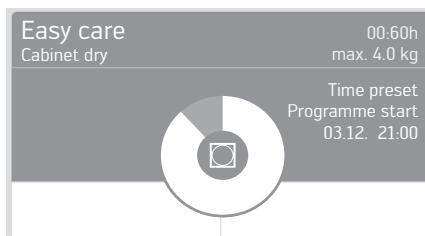

- ▶ The selected programme starts automatically when the start time is reached.
- ▶ Pressing the start button again cancels time preset and the washing programme can be started immediately.

Child lock active

See  **Settings / Child lock**.

Drying +

With this option the dryness level can be increased temporarily – for the duration of the selected programme.

Notice

To increase the dryness level in general (for all programmes), the function **Dryness level increased** must be activated in the user settings (see **Settings / Dryness level increased**).


Express

For drying reduced laundry loads or single items made of cotton, synthetic or mixed fabrics.

Time

When calling up timed programmes, the minimum programme duration is displayed.

- ▶ The drying time can be adjusted to the kind and amount as well as the dryness level of the laundry.

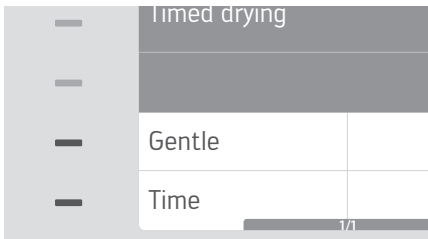


- ▶ Increase the programme duration by tapping the light bar next to **Time** (5min steps).


Settings


Your dryer has basic settings from the factory. The settings can be adapted to the users individual needs either when first used or later using the following functions.

The settings can only be changed if no wash programme is running.


Change settings

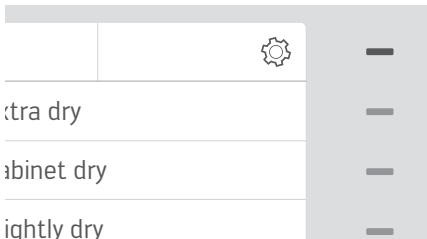

- ▶ Tap the light bar next to .

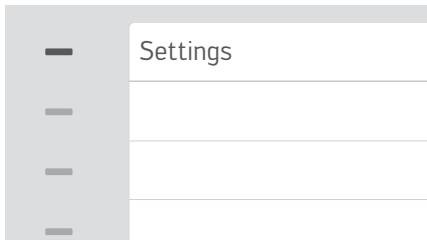


- ▶ Select **Settings** by tapping the light bar.
The menu **Settings** is displayed.

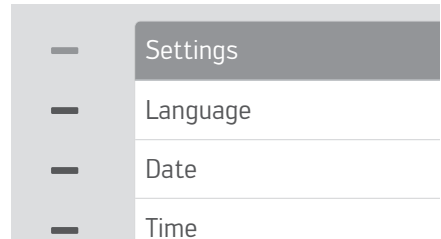


- ▶ Select the desired settings.
Additional menu pages can be opened by pressing the **arrow buttons**



Save changes

Pressing the button **Back in the menu**  (or 2 minutes after the last entry) ends the menu **Settings**. Changes must be confirmed when exiting the menu.

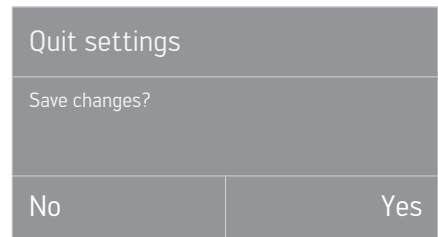

Menu Settings

* = Default setting

Language

▶ **English ***

▶ **.....**

Additional menu pages can be opened by pressing the **arrow buttons**



- ▶ Select the desired language by tapping the light bar.

Date

(Default setting)

The date can be set by tapping the light bar (hold for fast forward). Confirm entry with **OK**.

Time

(Default setting)

The time can be set by tapping the light bar (hold for fast forward). Confirm entry with **OK**.

Daylight savings / standard time

▶ **On ***

▶ **Off**

The automatic change of the time display to daylight savings time can be turned off.

Display programme time

▶ **Duration ***

The display shows the remaining time of the programme.

▶ **End**

The display shows when the programme will be finished.

Brightness display

▶ **50 ***

The background light intensity can be continuously adjusted from 20 to 100 % (hold bar for fast forward). Confirm entry with **OK**.

Signal tone volume

▶ **Off**

▶ **1**

▶ **2**

▶ **3 ***

▶ **4**

▶ **5**

The signal tone can be adjusted in 5 steps or set on silent.

Button tone

▶ **On ***

▶ **Off**

The button tone can be turned off.

Dryness level raised

- ▶ **Off ***
- ▶ **+ 1**
- ▶ **+ 2**
- ▶ **+ 3**

The dryness level can be adjusted as a general setting. Then it affects all programmes until the next change in settings.


To increase the dryness level only for the duration of the selected programme, select the option **Drying +**.

Child lock

- ▶ **Off ***
- ▶ **On**

The child lock is to prevent accidental starting, changing or deletion of a programme by small children.

Input with child lock activated

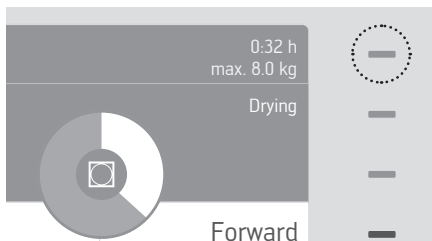

- ▶ Hold the **light bar in the upper right** pressed down (**is not lit!**).
- ▶ At the same time press the desired button.

Crease protection

- ▶ **Off**
- ▶ **30 min ***
- ▶ **6 h**

At the end of the programme a crease protection phase (loosening up of laundry) for 30 minutes or 6 hours can be set.

Laundry spun

- ▶ **Normal ***
- ▶ **Reduced**

The programme duration is displayed more precise, when the dryer is aligned with the spin speed of the washing machine (The default value corresponds to a spin speed of 1400 rpm.).

Switching off the machine

Settings for switching of the machine automatically:

- ▶ **Off**
Machine always remains switched on.
- ▶ **On ***
The machine is automatically switched off, when the programme has ended or when there is no further action taken after turning the machine on.
- ▶ **Standby +**
No function.
(Only for machines with payment system)

▶ **Standby**

No function.

(Only for machines with payment system)

Waking up machine

- ▶ Press button **On / Off** .
-

Automatic door opening

▶ **Off ***

▶ **On**

If this function is switched on, the door will open automatically at the end of the programme.

Default settings

- ▶ Select the function.

Default settings	
Reset to default setting?	
No	Yes

- ▶ Resetting to default (state as delivered) must be confirmed.
-

Notice

All settings are reset to default. Saved favourite programmes are deleted also.

Cleaning and Maintenance

Caution

Danger of electric shock!

- ▶ Switch off the power supply to the machine before cleaning.
- ▶ Under no circumstances spray the machine with water.
- ▶ Do not use a steam cleaner.

Notice

Solvents can damage parts of the machine, produce poisonous vapour and carry the risk of explosion.

Do not use cleaning agents containing solvents.

Cleaning the machine

- ▶ Do not use abrasive cleaning agents.
- ▶ Never scratch or scrape with sharp objects.
- ▶ Casings and control areas should only be cleaned with soap or a commercially available, solvent-free, non-abrasive cleaning product.

Notice


- ▶ Do not clean chrome steel machine parts with chrome steel cleaners.
 - ▶ Never use steel wool!
-

Cleaning the fluff filters


See **Drying / Cleaning the fluff filters**.

Cleaning the filter support

From time to time it is necessary to remove fluffs that have accumulated inside the filter support. To do so, use a vacuum cleaner or a cleaning brush.

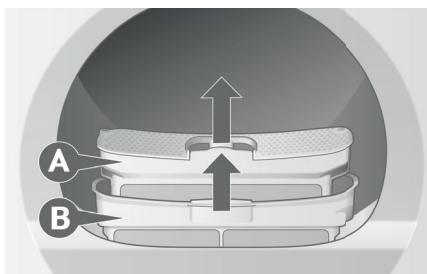


- ▶ Pull both filters out of the filter support.

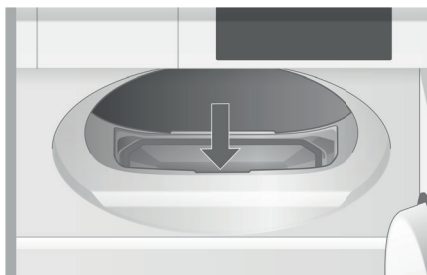

- ▶ Run the pipe of the vacuum cleaner or the brush around the well of the filter support.
- ▶ Remove any residual fluff.
- ▶ Replace the two filters properly.

Cleaning the moisture sensor

After longer operation, small deposits (lime, fabric refiner) can form on the front inner side of the drum on both sides of the longish moisture sensors. With moisture controlled programmes, this can result in the desired level of dryness not being reached.

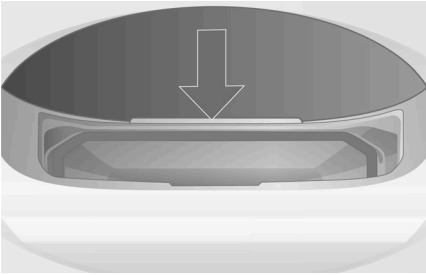

- ▶ Wipe deposits away with a cloth soaked in vinegar.

Emptying for frost protection or transport

If the machine is in a room susceptible to frost or is to be transported, it must be completely emptied.


- ▶ Start any programme.
- ▶ Press the light bar next to **Forward** repeatedly until **Self-cleaning** is displayed.
- ▶ Allow the programme to finish (without crease protection).

Self-cleaning



The dryer is equipped with an automatic self-cleaning function.

At the end of each programme and also during the drying process, if necessary, the heat exchanger is cleaned.

A slight knocking noise can be heard during the cleaning process and the self-cleaning symbol  is displayed.

Problems



Warning


Improper repairs can result in severe accidents, damages and operation malfunctions!

Do not make any changes, manipulations or attempt repairs using tools such as screw-drivers, etc.

Minor problems which you can rectify yourself

ERROR MESSAGES ON THE DISPLAY

Child lock active	<ul style="list-style-type: none">▶ Hold the bar in the upper right (is not lit!) and at the same time press the desired button.
Check drain	<p>Condensate water pump is not running.</p> <ul style="list-style-type: none">▶ Check if the water discharge hose is bent or the water discharge provided by the customer is clogged. After rectifying the error, the programme can be continued from the point at which it was interrupted.▶ Press the light bar next to Continue.
Close door	<p>The start button has been operated before the door has been closed.</p> <ul style="list-style-type: none">▶ Close the door and press START.
Clean fluff filter Displayed while programme is running	<ul style="list-style-type: none">▶ Press button Open the door . The loading door springs open.▶ Clean the fluff filters (see Drying / Cleaning the fluff filters).▶ Close the door and press the light bar next to Continue.
Displayed after programme end	<ul style="list-style-type: none">▶ Acknowledge the error message with OK.▶ Clean the fluff filters (see Drying / Cleaning the fluff filters).▶ If the error message is displayed again, contact customer service.
Error door lock	<ul style="list-style-type: none">▶ Wait until the programme has ended.▶ Press again button Open the door .▶ If the door cannot be opened after the programme has ended, contact customer service.

Programme stopped Button **On / Off**  was pressed during a running programme.

▶ Press the light bar next to **Continue**.

ERROR MESSAGES F --

«Error F --»
is displayed

▶ Acknowledge the error message with **OK**.
Machine restarts.

▶ Re-select a programme and press button **START**.

«Error F --»
is displayed again
despite programme
restart

▶ Acknowledge the error message with **OK**.
▶ Interrupt the power supply for one minute (switch the main switch off and on again). As soon as the display lights, the appliance is again ready to operate.


▶ Select again a programme and press button **START**.

«Error F --»
is displayed again
after interruption
of the power supply

▶ Note the error message.
▶ Close the water tap and switch off the power supply.
▶ Contact customer service (see **Customer service**).

Other faults, which you can rectify yourself

MACHINE OPERATION

Machine does not start when pressing the On / Off  **button**

▶ Check whether the mains power is switched on (wall / plug).
▶ Check whether all the fuses are intact or the safety switch has tripped.

Mains blockage (generally at noon).

▶ Operate the machine after the mains blockage has ended.

▶ If the dryer does not start despite correct power supply, contact customer service.

The dryer does not start

▶ Press button **START**.
▶ If the programme does not start despite pressing the start button, contact customer services.

Notice

When time preset is activated, the programme starts only at the pre-selected time.

The drying target was not achieved	<p>When warm, laundry feels more moist than it actually is!</p> <ul style="list-style-type: none"> ▶ Remove the laundry from the dryer and let it cool.
	<p>When still moist:</p> <ul style="list-style-type: none"> ▶ Clean the fluff filters (see Drying / Cleaning the fluff filters). ▶ Increase degree of drying (see Settings / Dryness level raised). ▶ Clean the moisture sensor (see Cleaning and Maintenance / Cleaning the moisture sensor).
The individual laundry piece does not reach the set drying target	<ul style="list-style-type: none"> ▶ If one single piece is to be dried in the dryer, it will be dried more evenly by adding additional pieces, e.g. two terry towels or using the Express programme option.
The drying takes too long	<ul style="list-style-type: none"> ▶ Clean the fluff filters (see Drying / Cleaning the fluff filters). <p>Power failure.</p> <ul style="list-style-type: none"> ▶ Note lock times of EW.
The laundry is not dry after the maximum possible settings	<p>Drum is overloaded.</p> <ul style="list-style-type: none"> ▶ Observe the maximum loads in the programme table. <p>Insufficient room ventilation.</p> <ul style="list-style-type: none"> ▶ Open a window or door. <p>The fluff filters are blocked with fluff or scale deposits.</p> <ul style="list-style-type: none"> ▶ Clean the fluff filters (see Drying / Cleaning the fluff filters).
Drum lighting does not work	<p>The LED is defective.</p> <p>For safety reasons the LED must only be replaced by the customer service or a qualified specialist.</p>
Dampness in the room increases significantly	<p>The room does not have sufficient ventilation</p> <ul style="list-style-type: none"> ▶ Ensure adequate ventilation.
Puddle of water or stains on the floor	<ul style="list-style-type: none"> ▶ Check, the drain hose for leakage and proper installation.

Technical specifications

Product data sheet for household washing dryer

according to EC regulation no. 392 / 2012

HUWA

Model name / label	Suisse 8WPT 16	
Nominal capacity ¹⁾	kg	8,0
Dryer type	Heat pump dryer	
Energy efficiency class A+++ (highest efficiency) to D (lowest efficiency)	A++	
Weighted annual energy consumption ²⁾	kWh/year	233
Dryer	with automatic	
Energy consumption of the standard cotton programme		
Energy consumption full load	kWh	1,92
Energy consumption partial load	kWh	1,09
Power consumption in off-mode	W	0,12
Power consumption in left-on mode ³⁾	W	0,12
Duration of the left-on mode ⁴⁾	min	5
Standard programme, to which the information in the label and the data sheet relates ⁵⁾	☐ Cotton Cabinet dry	
Weighted programme duration of the standard cotton programme	min	109
Programme duration at full load	min	139
Programme duration at partial load	min	87
Condensation efficiency class A (highest efficiency) to D (lowest efficiency)	A	
Average condensation efficiency of the standard cotton programme at full load	%	89
Average condensation efficiency of the standard cotton programme at partial load	%	91
Weighted condensation efficiency of the standard cotton programme at full load and partial load	%	90
Airborne acoustical noise ⁶⁾	dB(A) re 1pW	61

¹⁾ In kg Cotton for the standard programme at full load.

²⁾ Based on 160 standard drying cycles for the standard cotton programme at full load and partial load as well as the consumption of operating modes with low power consumption. The actual power consumption per cycle depends on how the machine is used.

³⁾ 4,06 W if the machine is not configured to automatically turn off.

⁴⁾ If the household laundry dryer is equipped with power control.

⁵⁾ This programme is suitable for drying normal, wet cotton textiles and is most efficient regarding energy consumption for cotton.

⁶⁾ For the standard cotton programme at full load.

Customer service

Check whether you can correct the fault yourself before you call customer service (see chapter **Problems**).

If advice is required, costs may be incurred if a service technician is required, even during the guarantee period.

The guarantee does not cover faults caused by improper use and by blocked filters or foreign bodies.

If you cannot repair a malfunction yourself, disconnect the power supply (switch of the main switch / fuse at installation site) and call customer service.

Tel. + 41 (0) 62 773 11 70

Fax + 41 (0) 62 773 11 09

Give customer services the error message F-- and the product and appliance number of your washing machine. You will find this information on the type label inside the opened door.

Product number

Appliance number

Warranty

Warranty 2 years.



Swissmade 

Hauptsitz und Service-Zentrale

R. Hunziker AG

Waschmaschinenfabrik





CH-5728 Gontenschwil

Tel. + 41 (0) 62 773 11 70


www.huwa.ch

Brief instruction

Follow the safety instructions in this manual!

- ▶ Turn on the power switch and open the water tap.
- ▶ Press button **On / Off** .
- ▶ Press button **Open the door** .
- ▶ Select the programme and the programme options (go backwards or forwards with the **arrow buttons**  ).
- ▶ Add laundry and close the loading door.
- ▶ Press button **START**.

At the end of the programme

- ▶ Press button **Open the door**  and remove the laundry.
- ▶ Clean the fluff filters.



WT 14 EFH W